


CORNER EXTERIOR BLINDS


1. TAKING MEASUREMENTS

CETTA 80 FLEXI – corner

Outside corner


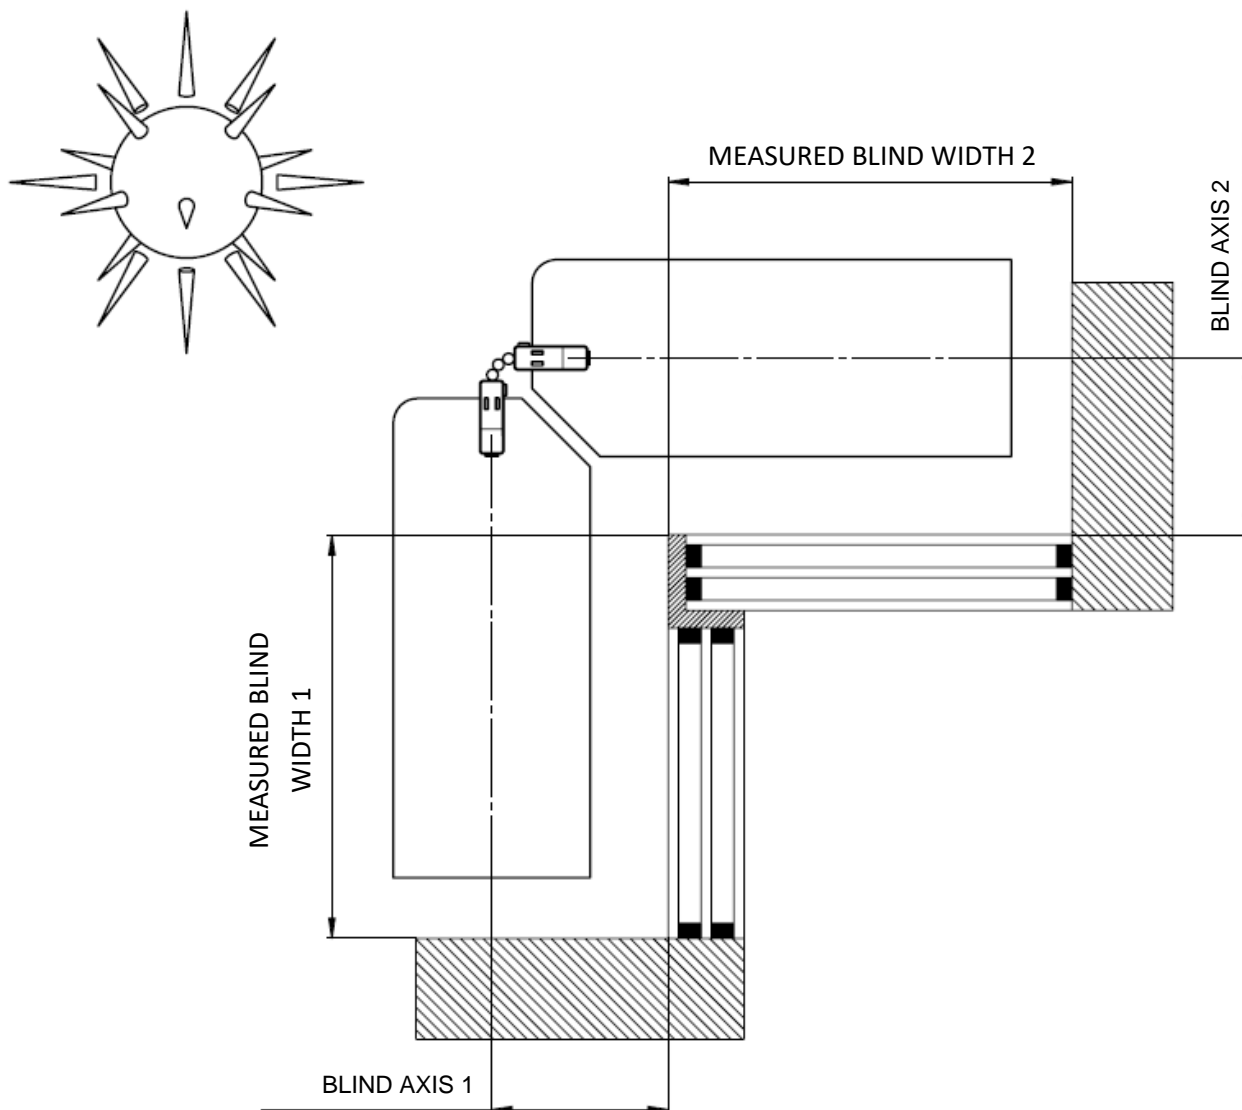


Inside corner

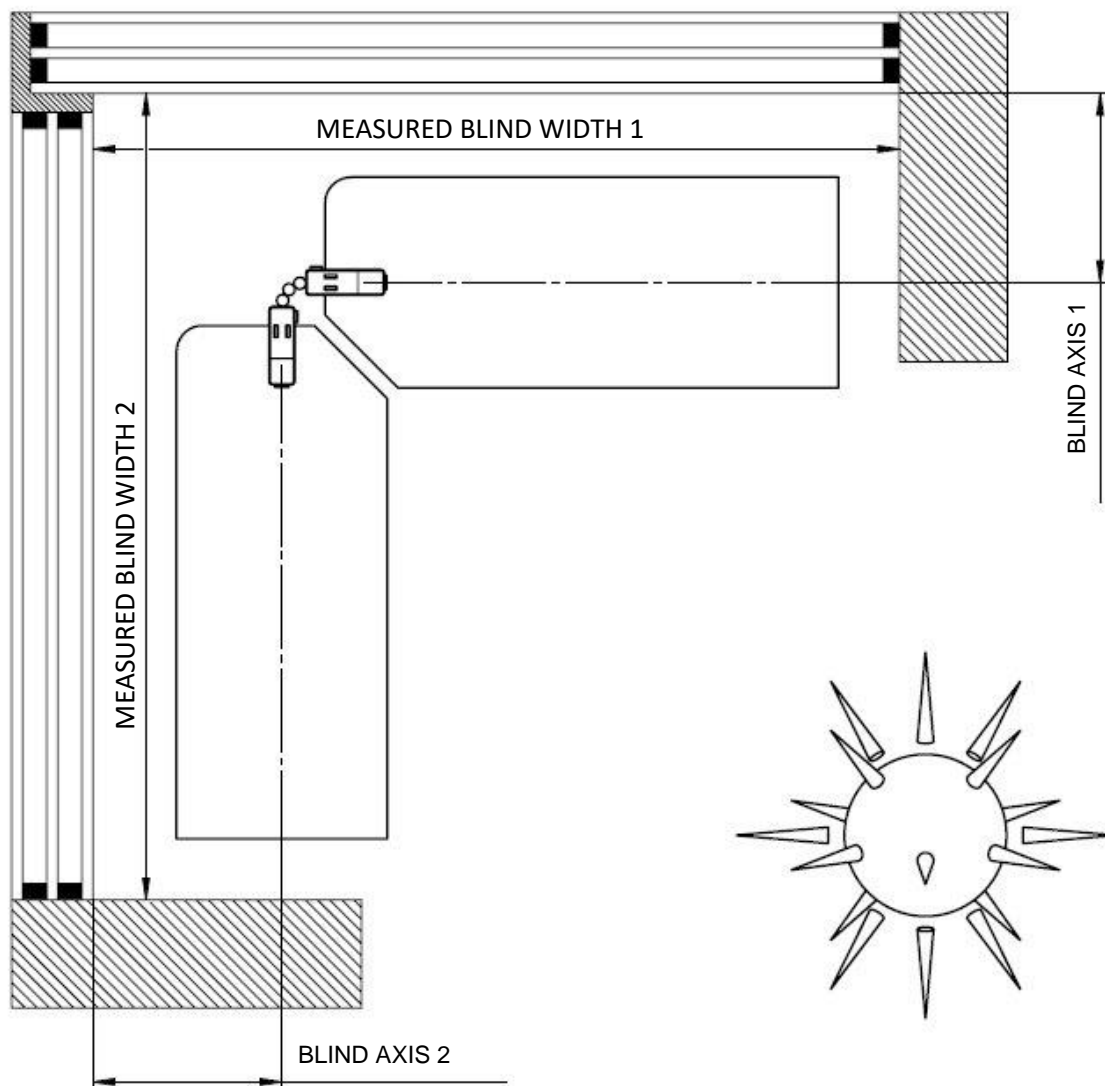


ZETTA 90 – corner

Outside corner

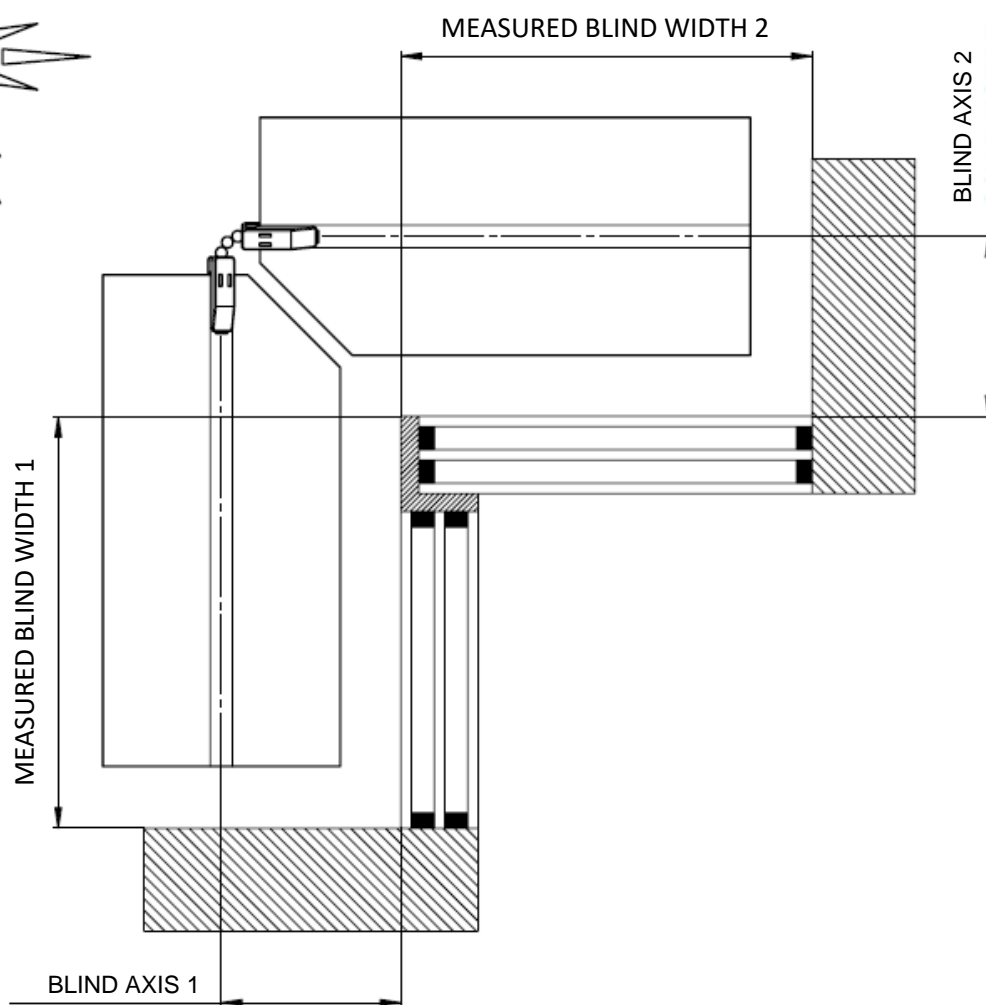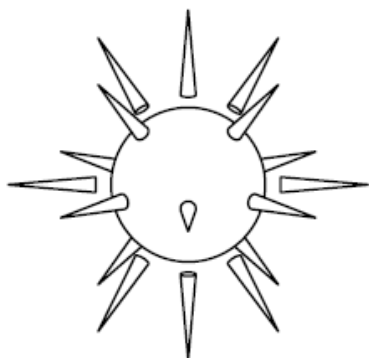

Inside corner

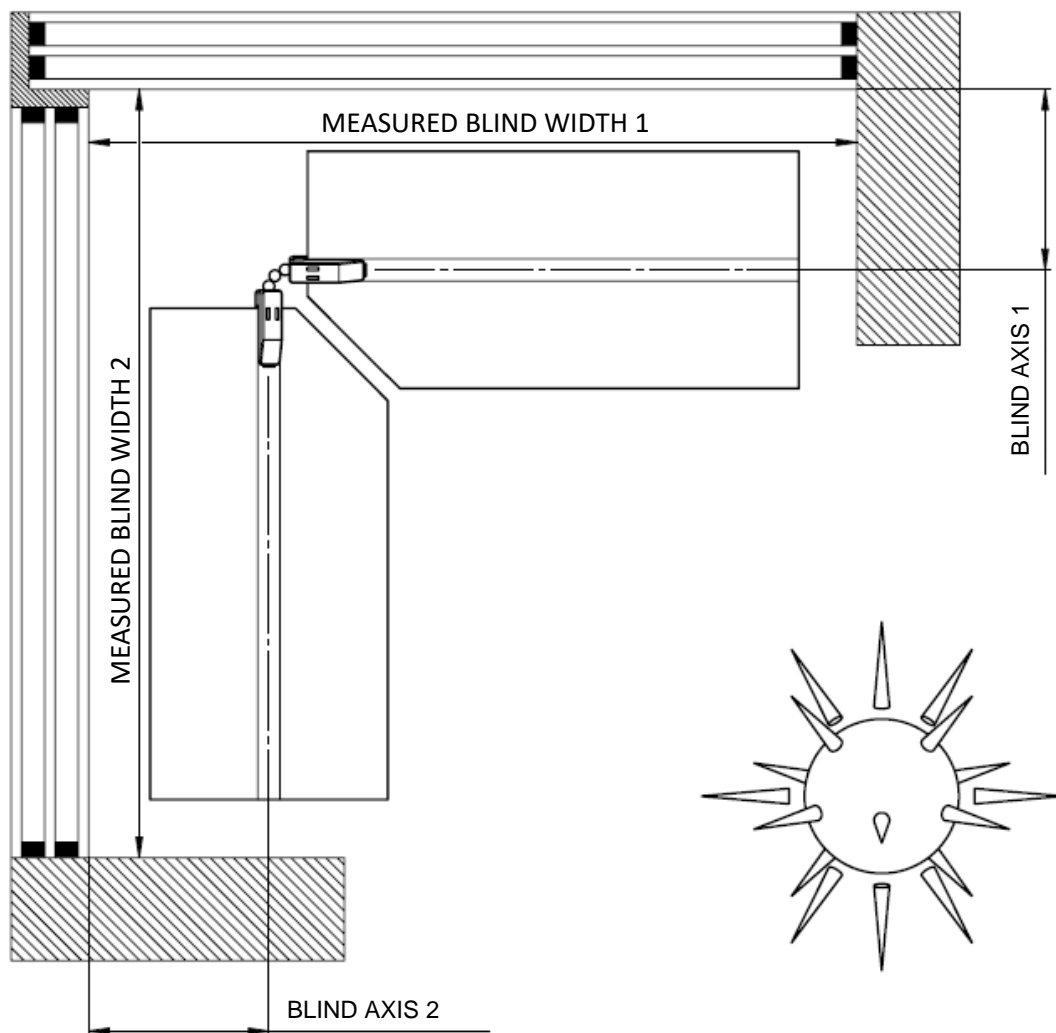

2. ASSEMBLY

The corner blind is supplied disassembled to components, i.e., motorised blind separately, and non-motorised blind separately. The motorised blind shall have the right-angle gearbox attached with its holder, and the lower profile will have the connecting plastic corner attached. A spacer shall protrude from the gearbox end. Slats of the motorised blind shall be equipped with guides with a chain for the corner joint, including free guides for the slats of the non-motorised blind.

2.1. ASSEMBLY PROCEDURE

1. Lay out the channel holders so that they do not interfere with the textile straps of both blinds – ALL holders must be placed on the same horizontal plane (important note → they must be levelled horizontally).
2. Put the motorised blind in the channel holder clamps. DO NOT TIGHTEN the clamp screws.
3. Place the gearbox holder on the blind gearbox with the motor.
4. Put the non-motorised blind in the channel holder clamps. DO NOT TIGHTEN the clamp screws.
5. Move the whole non-motorised blind to the corner until channels of both blinds unite in the gearbox, but do not slide the shaft of the non-motorised blind in the gearbox.
6. Tighten the gearbox holder.
7. Tighten the screws of the channel holder clamps.
8. Level both lower rails to the same horizontal plane (lower the non-motorised blind freely; use the service cable to lower the motorised blind).
9. Slide the shaft of the non-motorised blind to the protruding spacer in the right-angle gearbox and push it all the way.
10. Secure the shaft of the non-motorised blind using screws in the bearings.
11. Use 3 screws to connect both lower rails in the plastic connecting corner.
12. Install both lateral guide rails.
13. Use the service cable to lower the coupled blinds to the lower position, click the corner guides on the chain to the respective slats.
14. Use the service cable to check the blind function.

15. Install the cover plates.
16. Use the service cable to adjust end positions of the motor.
17. Connect the blind to the supply cable.